


# SC90 LEG SUPPORTS [SETUP INSTRUCTIONS]

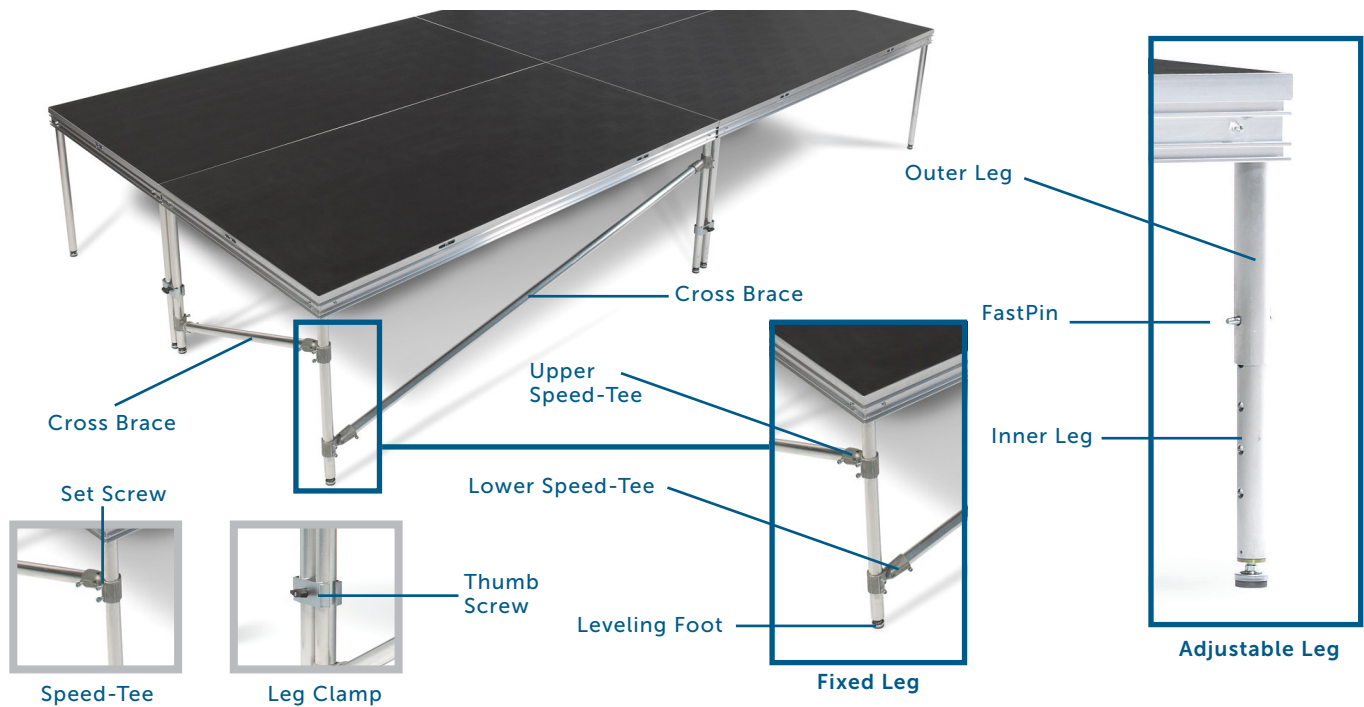

## SC90 LEG SUPPORT INSTALLATION:

1. With **SC90 Platform** securely on its side, place legs into Corners Pockets. (Reference **SC90 Platforms** setup instructions.) (Note: If equipment requires multiple heights, reference **Color Codes** to identify appropriate leg locations as noted on *Master Plan*.)
2. **Adjustable Legs** (if provided): Adjust leg by removing **FastPin** and telescoping **Inner Leg** to desired height, referencing *Master Plan*.
3. **Cross Bracing** (if provided):
  - a. With Platform still on its side, place correct number of **Speed-Tees** on legs, referencing *Master Plan*.
  - b. Slide **Upper Speed-Tee** up (approx. 6") from bottom of Platform and hand-tighten **Set Screws**.
  - c. Referencing **Color Codes** noted on *Master Plan*, insert appropriate **Cross-Brace** into **Upper Speed-Tee** and hand-tighten **Set Screw**.
  - d. Insert opposite end of **Cross-Braces** into **Receiver Cup** of **Lower Speed-Tee** and hand-tighten **Set Screws**.
  - e. With all **Set Screws** hand-tightened, use (5/16") **T-Handle** and rotate clockwise 1/3 past snug.
4. **Leg Clamps** (if provided): When placing Platforms in final position, attach **Leg Clamps** as noted on *Master Plan*. (Note: Locate Leg Clamps approx. 4" from floor.)
5. Proceed to **SC90 Platform** setup instructions.

**WARNING::** Leveling Foot 2" Maximum Height Adjustment.



## WARNING

### Leveling Foot 2" Maximum Height Adjustment

*Staging Concepts does not assume liability for any damage done to products or persons during the setup of this equipment. For questions about setup or to consult with Staging Concepts on your project, please call 763.533.2094.*




**Maximum    Minimum**

